


FM4000 ALARM SYSTEM

OPERATING INSTRUCTIONS

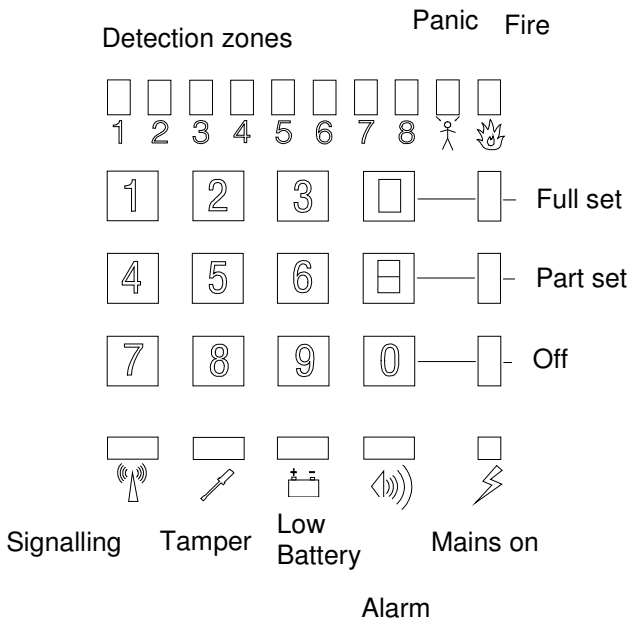


CI-085 iss6

FM Electronics *Manufacturer of quality wireless products.*

FM Electronics South Walk, Vantage Point Business Village, Mitcheldean, Gloucestershire, GL17 0DD
Tel. 01594 827070 email. sales@fmelectronics.co.uk www.fmelectronics.co.uk
FM Electronics is the Manufacturing division of **FM Security Limited**

Explanation of indicators on the control panel

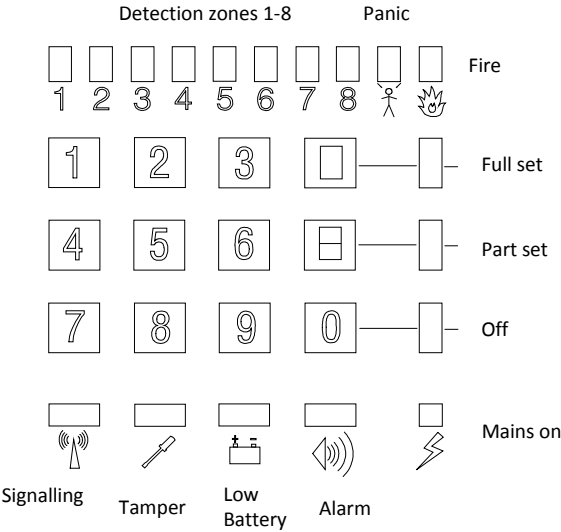

- Off

Illuminated when the system is disarmed.
- Part set

Illuminated when the system is Part armed.
- Full set

Illuminated when the system is Fully armed.
- Mains on

Illuminated - indicates mains supply is present.
- Flashing - is a warning that mains supply is disconnected.
- Alarm

Illuminated - Indicates an alarm has occurred.
- Flashing -An alarm has occurred and the system needs an engineer reset. (Call your alarm company)

Low battery	Illuminated - Control panel battery fault. (Call your alarm company) Flashing with a zone indicator - A detector battery needs replacing. Call your alarm company.
Tamper	Illuminated - The control panel or external siren has been tampered or incorrect pin numbers have been entered Flashing with a zone indicator - A detector has been tampered with. (Call your alarm company)
Signalling	Illuminated- A radio signal of a similar frequency is present for more than 45 seconds. If it continues call your alarm company. Flashing with a zone indicator - A detector has failed to report. (Call your alarm company) Flashing on its own - The telephone line is not operational. (If the line remains faulty call your alarm company)
Zones 1 to 8 -	If an alarm has occurred they indicate which detector first triggered the alarm.
Panic	Indicates that a panic alarm has been operated.
Fire	Indicates that a fire sensor has operated.

ARMING THE ALARM SYSTEM WHEN LEAVING THE PREMISES

1. **Key in your 4 digit pin number. (Factory default is 1 2 3 4)**
2. **Press Full set key**
3. The indicators illuminate to show which zones are being armed.
To add or remove a zone, press the appropriate number key.
A flashing indicator means that a door has been left open.
4. **Vacate the protected area via your designated exit route.**
5. **Wait for the exit timer bleep to stop.** The system is then armed.
If the bleep does not stop, return to the panel to identify where the fault is.

If the detectors are not clear to set, i.e.. A door is still open. The affected zone indicator will flash and will prevent arming until either the door has been closed or that zone is omitted.

When armed all zone and fault indicators will be extinguished.

Note: If the panel fails to arm due to a fault, you may be able to set the system with the fault present by first unsetting the system, enter your code & zero at the panel, then attempt to arm the system again. If this fails call your alarm company.

ARMING THE ALARM SYSTEM WHILST REMAINING ON THE PREMISES

1. **Key in your 4 digit pin number.**
2. **Press Part set key**
3. The indicators illuminate to show which zones are being armed.
To add or remove a zone, press the appropriate number key.
A flashing indicator means that a door has been left open.
4. **Vacate the protected area via your designated exit route.**
5. **Wait for the exit timer bleep to stop.** The system is then armed.
If the bleep does not stop, return to the panel to identify where the fault is.

If the detectors are not clear to set, i.e.. A door is still open, the affected zone indicator will flash and will prevent arming until either the door has been closed , or that zone is omitted.

When armed all zone and fault indicators will be extinguished.

Note: If the panel fails to arm due to a fault, you may be able to set the system with the fault present by first unsetting the system, enter your code & zero at the panel, then attempt to arm the system again. If this fails call your alarm company.

DISARMING THE ALARM SYSTEM

1. **Enter the protected area by the designated entry route.**
2. **Go straight to the panel.**
3. **Key in your 4 digit pin number.**
If you do not disarm the system before the entry time has expired, the alarm will operate.

PROTECTION WHILST YOU ARE AT HOME

If you have a portable panic button a full alarm will be initiated by pressing the Panic button for one second. Refer to the rear page to see if your panic button has been set for silent or audible operation.

The Part Set facility allows part of the system to be armed whilst you are at home.

For example detectors downstairs can be armed whilst you are in bed. Or a part of the building can be armed whilst you are working in another part of the premises.

CHANGING YOUR PIN NUMBER.

You can change your 4 digit PIN number at any time by the following sequence.

1. Enter your 4 digit pin number.
2. Press key 7.
The full set indicator on the panel will flash.

3. Key in your new 4 digit pin number twice.
The flashing indicators will now stop.

If you make a mistake when keying in a number, press the Full Set key to exit and start again. The number will not change until you have keyed in the same 4 digit PIN number twice.

If no key is pressed for 20 seconds the program mode is aborted and the panel will revert to the original pin number.

ALARM MEMORY

Following an alarm the event leading to the alarm is stored in memory. At any time whilst unset, the alarm display can be recalled in order to verify what occurred.

Press the full set button The detector or fault which initiated the last alarm will be displayed.

Pressing the Part Set button - Recalls the most recent event.

Pressing 0 returns the display to normal.

CHIME OPTION

If you require a detector to trigger a chime. i.e. To give an audible indication when someone enters via the front door, you may set the sensor on that door to operate a chime.

To set or remove chime:

1. **Key in your pin number**
2. **Press the 8 key.**
The Full set indicator will flash.
3. **Press the number keys** to select which zones will chime.
The zones with their indicators illuminated will chime.
The zones not illuminated will not chime.
4. **Press the Full Set key** when you have set the desired chime zone.

ENGINEER ACCESS REQUIRED (FM4000EN & FM4000X PANELS ONLY)

If an engineer calls to service or repair your system, to allow them to access your system you will need to enter your code & press zero, before the engineers code is entered.

KEYPAD TAMPER

If incorrect attempts are made to enter the pin number, a tamper alarm will operate, (Internal audible in daytime. Full alarm when armed).

TESTING YOUR ALARM SYSTEM

If your system incorporates an automatic telephone dialler going through to a neighbour let your neighbour know you are carrying out a test .

If you have Police response via a Central Station connection, triggering the alarm will not be acceptable to the Police.

Facility exists for you to test the detectors without causing a full alarm.

To select walk test:

1. **Key in your pin number**
2. **Press the 9 key.**
3. **Walk around the building triggering each detector.**

Each time a detector is triggered a chime tone will be generated.

On return to the panel, the zone indicators will be illuminated, indicating which zones have been triggered.

Pressing the Off "0" key will clear the indicators.

PIR movement detectors have a 2 minute battery save timer. This means that once it has sensed movement and transmitted its alarm signal, the detector must see no movement for 2 minutes before it becomes active again.

Before testing PIR detectors ensure that no one has walked past them for 3 minutes.

A detector with a low battery will operate the internal audible alarm when triggered.

To return the zone indicators to normal operation:

1. **Key in your pin number**
2. **Press the 6 key.**

In normal operation the zone lights indicate when a door is open and go out again when the door is closed.

ALWAYS RETURN TO NORMAL OPERATION WHEN WALK TESTING IS COMPLETED.

TESTING YOUR OUTSIDE BELLS / SIREN

Facility exists for you to test the outside bells.

To operate the bells for 10 seconds:

1. **Key in your PIN number**
2. **Press the 4 key**
3. **The outside siren will sound for approximately 10 seconds.**

PREVENTING FALSE ALARM

1. When you are away from home with the alarm system armed, Dogs or Cats must not be allowed access to rooms protected by PIR movement detectors.
2. Always disarm the system immediately on entry and ensure that children or pets do not deviate from the entry route until the system has been disarmed.
3. When going away do not turn off the electricity supply to the alarm.

WHAT HAPPENS IF THE ALARM OPERATES WHILST YOU ARE AWAY

The Siren will operate for a pre-determined time and then turn off to avoid noise nuisance.
The strobe will continue to flash until the system is disarmed.
The system will automatically re-arm after the siren has cut out.

USING THE 4173-GB REMOTE CONTROL

- | | |
|-------------|--|
| Full arm | Press the Full set button for one second. |
| Part Arm | Press the Part Set button for one second. |
| Disarming | Press the OFF button for one second. |
| Panic Alarm | Press the two outside (Off and Full) buttons for one second. |

Battery low indication - When operating the remote control the green status indicator illuminates. Low battery in the 4173-GB unit will result in panel Low Battery indication. Replace the battery as soon as possible.

DETECTION ZONES

ZONE 1 _____

ZONE 2 _____

ZONE 3 _____

ZONE 4 _____

ZONE 5 _____

ZONE 6 _____

ZONE 7 _____

ZONE 8 _____

PANIC _____

FIRE _____

EXIT TIME SETTING minutes seconds

ENTRY TIME SETTING minutes seconds

SIREN DURATION minutes

PANIC FACILITY Silent operation Audible operation

FOR SERVICE TELEPHONE:

YOUR ACCOUNT NUMBER: